

CAR SECURITY

SPECIF	FIC VEHICLE ALARM FITTING INSTRUCTIONS	REV. 00
www.cobra.it		
MAKE AUDI	MOD. A4 YEAR. $96 \rightarrow$	PETROL DIESEL X
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the right sid compartment, under the coolant bowl.	e of the engine
POWER SUPPLY	+ 30: Connect with a ring terminal to a + 30 threaded pin in the fuse - 31: Connect with a ring terminal to one of the terminals coming a power supply on the left side, driver's side.	
IGNITION WIRE	+15/54: connect to the 2 mm ² GREEN/RED wire located in the behind the left lateral bulkhead, driver's side.	e wiring harness
DIRECTION INDICATORS	Connect to the 1 mm ² BLACK/WHITE and BLACK/GREEN wire wiring harness coming out of the 6 way yellow connector nr.8 lo side of the covering of the left lateral pillar.	
ELECTRIC WINDOWS	Comfort closing Negative control signal (lock doors + windows): connect to the BROWN/GREY wire of the 2nd connector located driver's side. It is necessary to set lock command wire to 12-24s.	on the left side,
CENTRAL DOORS LOCKING	Negative control signal (unlock/lock doors only): Connect to the GREY/RED (alternatively GREY/WHITE) will RED/BLUE (lock) located in the 2nd connector down in the lecover, driver's side.	
IMMOBILISATION POINT	Gasoil pump Cut the 1,5 mm ² BLUE/BLACK wire located in the wiring harness of 3 way connector directly on the gas oil pump.	coming out of the
STARTER	+50: Cut the 1,5 mm ² RED/BLACK wire in the wiring harness of BROWN/VIOLET connector at the rear section of the relay marks under the dashboard, driver's side.	

Connect to the 1 mm² BROWN/RED wire located in the wiring harness coming out of the LIGHT BLUE/BLACK connector under the dashboard, driver's side. **BONNET SWITCH**

DOORS AND BOOT SWITCH Connect to the 1 mm² BROWN/WHITE wire located in the wiring harness under the

sill cover, driver's side.